

**140700 to 141707**

# **Illustrated Parts List**

## **MODEL SERIES**

**140700 to 141707**

### **TYPE NUMBERS**

0010 to 0143  
501000 to 501034

### **TYPE NUMBERS**


0100 to 0122  
501500 to 501542

### **TO FIND THE CORRECT NUMBER OF THE PART YOU NEED: FOLLOW THE INSTRUCTIONS BELOW.**

- A. Refer to Engine Model, Type and Code Number (formerly Serial Number) that is stamped on the blower housing or name plate of engine. (Engine type numbers such as 501541 are listed complete. Engine type numbers such as 0121 01 are listed herein only as 0121. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification). Then use the Illustrated Parts List covering these Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Numbers are listed. **THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE"**.
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type Number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.


PRINTED IN U.S.A.




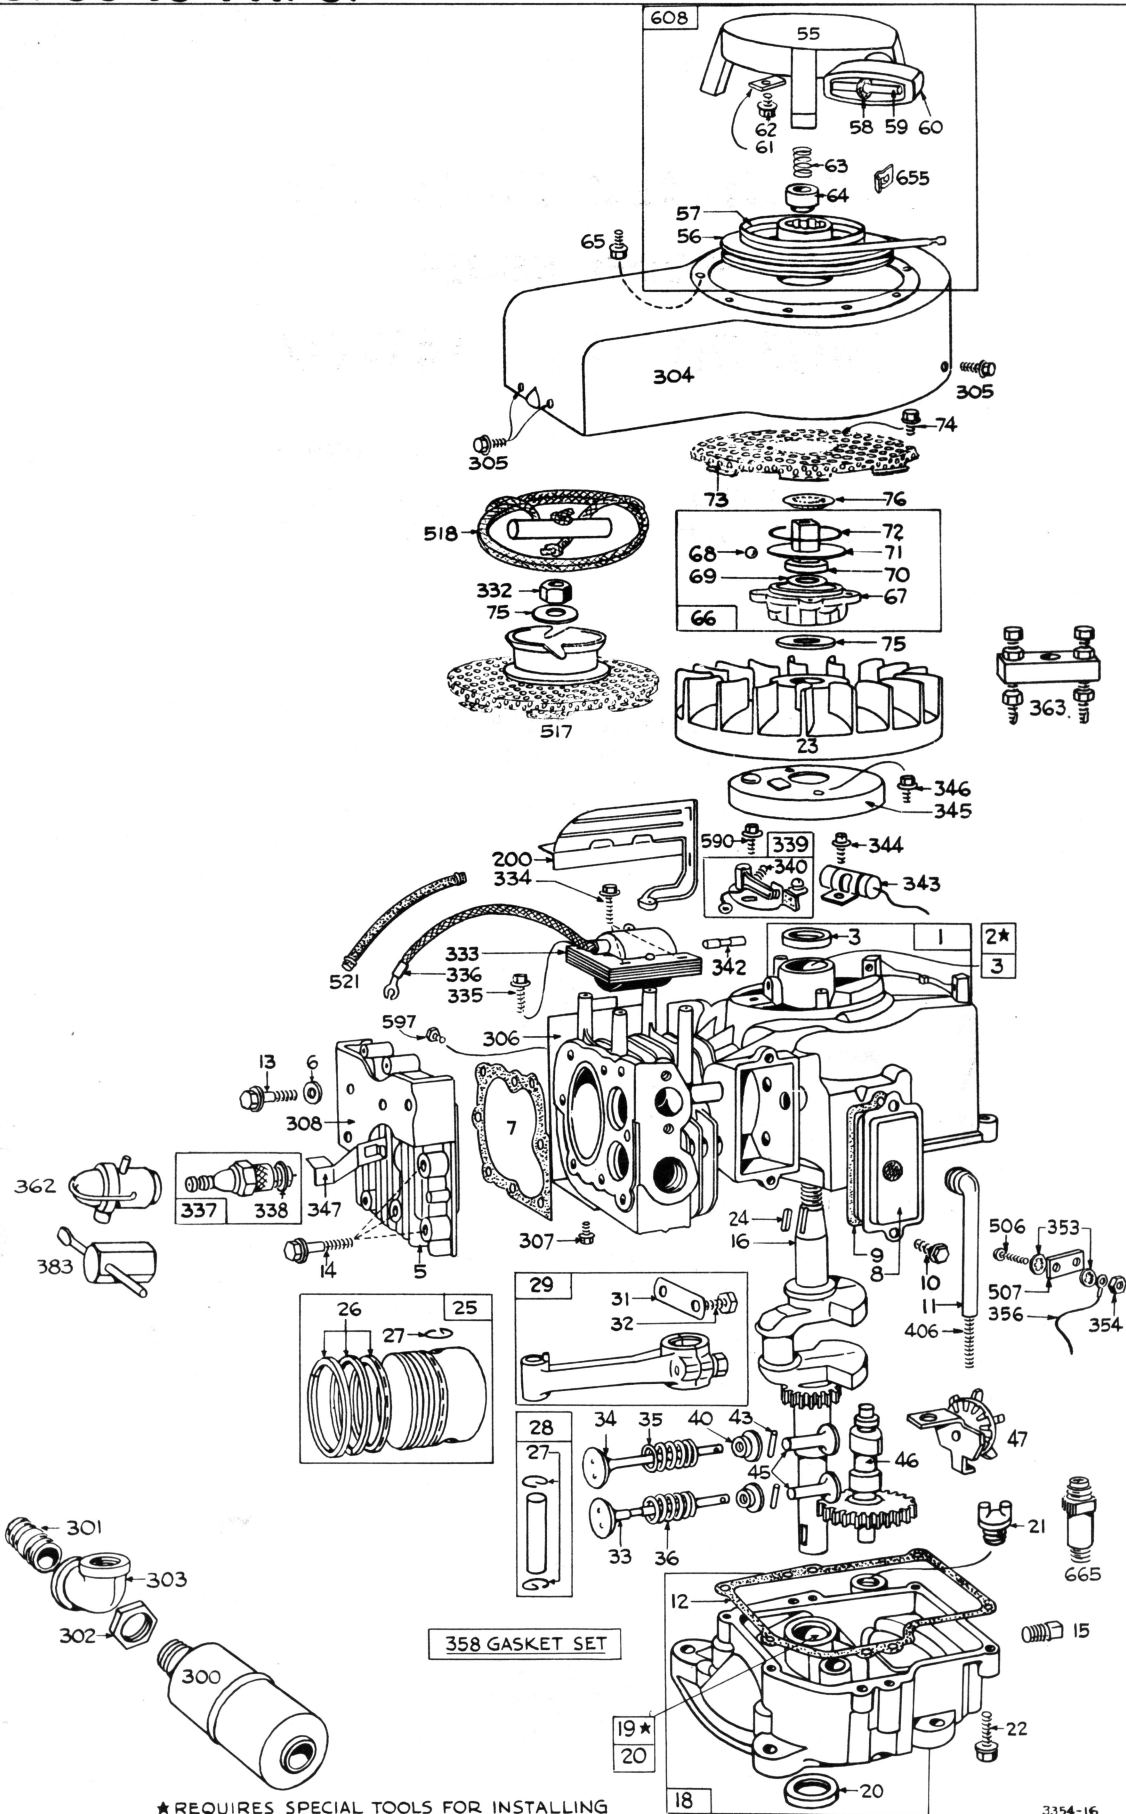


Assemblies include all parts shown in frames.






## 145 CARBURETOR OVERHAUL KIT

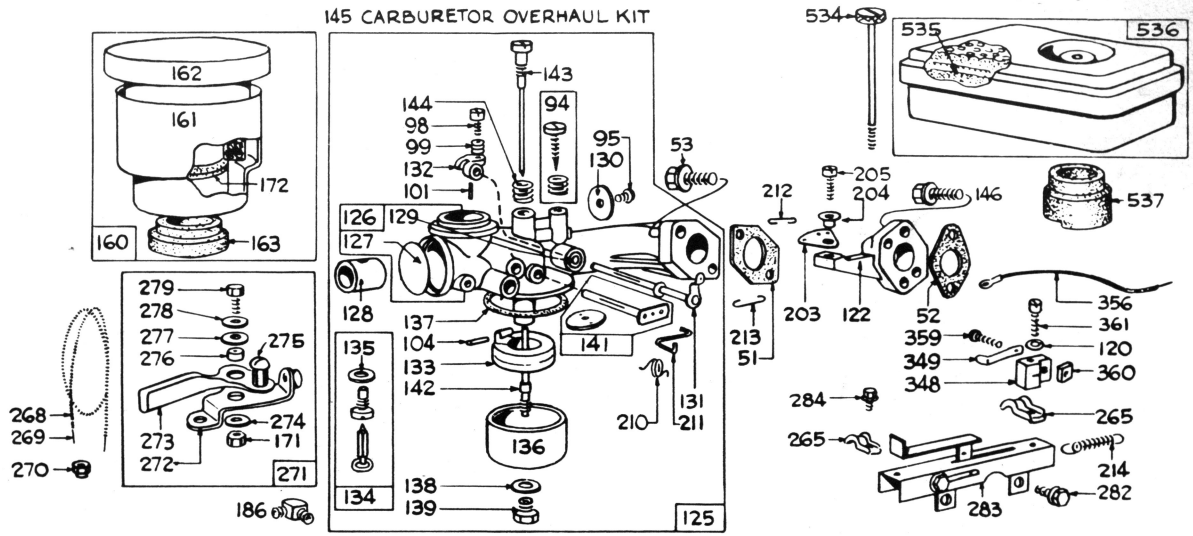

3357-123

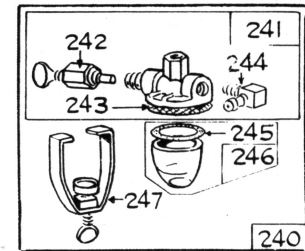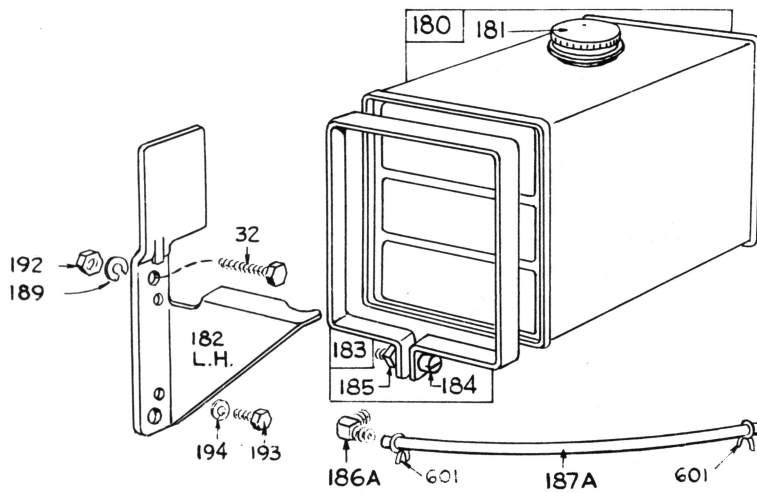

3355-68

 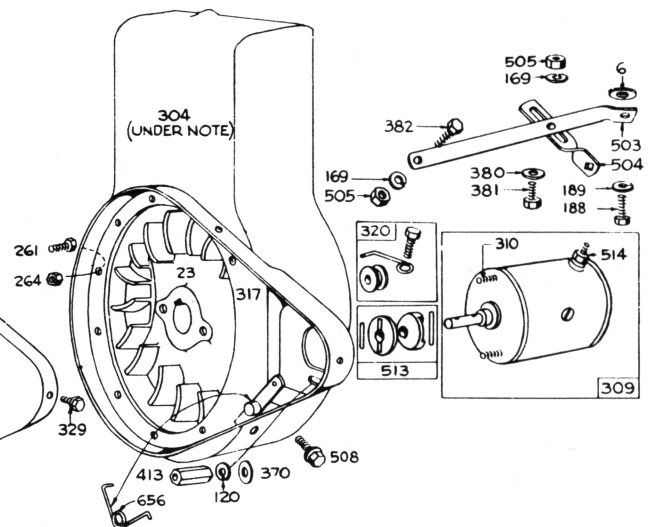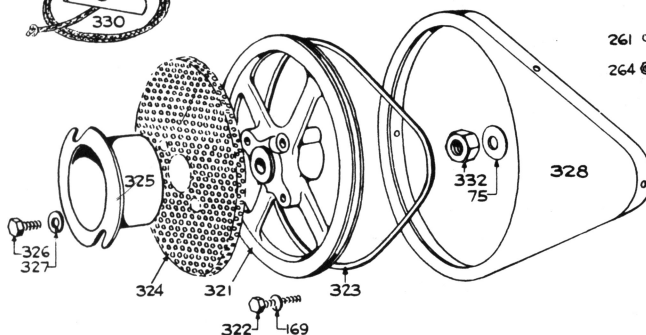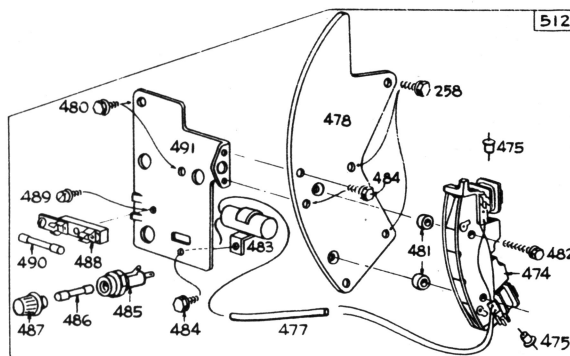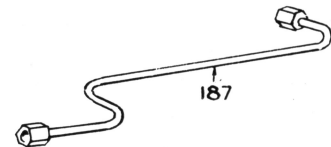

3353-123

# 140700 to 141707

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	299281	Cylinder Assembly (Sleeve Bore) This group of Cylinders used on <b>Model 141700</b> Series. <b>Note:</b> 296018 Cylinder Assy. (Sleeve Bore) Used on type Nos. 0117, 0121, 501520, 501521, 501524, 501526, 501527, 501529, 501532, 501533, 501534, 501535, 501536, 501537, 501538, 501539.	16	260356	Crankshaft <b>Note:</b> 260394 Crankshaft Used on <b>Model 1407</b> Series type Nos. 0136, 501030; also used on <b>Model 1417</b> Series type No. 501518. 260498 Crankshaft Used on <b>Model 1407</b> Series type Nos. 0130, 0131, 0137, 0141, 501033; also used on <b>Model 1417</b> Series type Nos. 501525, 501528, 501539. 260506 Crankshaft Used on <b>Model 1407</b> Series type Nos. 0125, 0139, 501023, 501025; also used on <b>Model 1417</b> Series type Nos. 501526, 501527. 260536 Crankshaft Used on <b>Model 1417</b> Series type Nos. 0121, 0142, 501529, 501533. 260707 Crankshaft Used on <b>Model 1407</b> Series type Nos. 0128, 501024; also used on <b>Model 1417</b> Series type No. 501538.	24	61760	Key — Flywheel
	299218	Cylinder Assembly "Kool-Bore**" This group of Cylinders used on <b>Model 140700</b> Series. <b>Note:</b> 297721 Cylinder Assy. "Kool-Bore**" Used on type Nos. 0128, 0130, 0131, 0134, 0142, 501020, 501021, 501024, 501026, 501028, 501031, 501032, 501033.				25		<b>Model 141700 Series Piston Assemblies (Sleeve Bore)</b> 295842 Piston Assy. — Standard 295846 Piston Assembly — .010" O.S. 295848 Piston Assembly — .020" O.S. 295850 Piston Assembly — .030" O.S.  <b>Model 140700 Series Piston Assemblies "Kool-Bore**"</b> 297692 Piston Assy. — Standard 297693 Piston Assembly — .010" O.S. 297694 Piston Assembly — .020" O.S. 297695 Piston Assembly — .030" O.S.  <b>Model 141700 Series Piston Ring Sets (Sleeve Bore)</b> <b>Note:</b> For Chrome Piston Ring Set — standard size — order Part No. 298451.
2	295962	Bushing — Cylinder <b>Note:</b> Requires special tools installation.	18	298616	Sump — Oil <b>Note:</b> 296594 Sump — Oil Used on <b>Model 1407</b> Series type Nos. 0130, 0131, 0142, 501033; also used on <b>Model 1417</b> Series type Nos. 0121, 501529, 501533.	26	295852	Ring Set — Piston — Std. Includes: 210703 Ring — Piston, Comp., Top, Standard 210601 Ring — Piston, Comp., Center, Standard 295843 Ring — Piston, Oil, Standard (w/expander) 295853 Ring Set — Piston — .010" O.S. Includes: 210889 Ring — Piston, Comp., Top, .010" O.S.
3	294606	Seal — Oil						
5	210578	Head — Cylinder						
6	22963	Washer — Plain						
7	270340	Gasket — Cylinder Head						
8	294988	Breather Assembly						
9	27803	Gasket — Valve Cover						
10	93394	Screw — Breather Mounting Sem						
11	67158	Tube — Breather						
12	27750	Gasket — Crankcase Cover — 1/64" thick						
	27876	Gasket — Crankcase Cover — .005" thick						
	27877	Gasket — Crankcase Cover — .009" thick						
13	93210	Screw — Cylinder Head (2-9/32" long)						
14	93211	Screw — Cylinder Head (2-21/32" long)						
15	91084	Plug — Oil Drain						

♦Included in Gasket Set — Part No. 295970

\*Trademark of Briggs & Stratton Corp.



REF. PART NO. NO. DESCRIPTION	REF. PART NO. NO. DESCRIPTION	REF. PART NO. NO. DESCRIPTION
		.030" O.S.
		Consists of: <b>211243</b>
		Ring,
		Piston,
		Comp.,
		Top,
		.030" O.S.
		<b>211246</b>
		Ring,
		Piston,
		Comp.,
		Center,
		.030" O.S.
		<b>211249</b>
		Ring,
		Piston,
		Oil,
		.030" O.S.
<b>210890</b> Ring— Piston, Comp., Center, .010" O.S.	Top, Std. <b>211037</b> Ring, Piston, Comp., Center, Standard <b>210602</b> Ring, Piston, Oil, Std.	
<b>295847</b> Ring— Piston, Oil, .010" O.S. (w/expander)		
<b>295854</b> Ring Set — Piston — .020" O.S. Includes: <b>210893</b> Ring— Piston, Comp., Top, .020" O.S. <b>210894</b> Ring— Piston, Comp., Center, .020" O.S. <b>295849</b> Ring— Piston, Oil, .020" O.S. (w/expander)	<b>297705</b> Ring Set — Piston — .010" O.S. Consists of: <b>211241</b> Ring, Piston, Comp., Top, .010" O.S. <b>211244</b> Ring, Piston, Comp., Top, .010" O.S. <b>211247</b> Ring, Piston, Oil, .010" O.S.	
<b>295855</b> Ring Set — Piston — .030" O.S. Includes: <b>210897</b> Ring— Piston, Comp., Top, .030" O.S. <b>210898</b> Ring— Piston, Comp., Center, .030" O.S. <b>295851</b> Ring— Piston, Oil, .030" O.S. (w/expander)	<b>297706</b> Ring Set — Piston — .020" O.S. Consists of: <b>211242</b> Ring, Piston, Comp., Top, .020" O.S. <b>211245</b> Ring, Piston, Comp., Center, .020" O.S. <b>211248</b> Ring, Piston, Oil, .020" O.S.	
<b>Model 140700 Series</b> <b>Piston Ring Sets</b> <b>"Kool-Bore"</b>  <b>Note:</b> For Chrome Piston Ring Set — standard size — order Part No. 298745.		
<b>297815</b> Ring Set — Piston — Std. Consists of: <b>210600</b> Ring, Piston, Comp.,	<b>297707</b> Ring Set — Piston —	
		<b>27 68546</b> Lock — Piston Pin
		<b>28 295840</b> Pin Assy. — Standard
		<b>295841</b> Pin Assy. — .005" O.S.
		<b>29 295839</b> Rod Assy. — Connecting
		<b>31 220811</b> Lock — Conn. Rod Screw
		<b>32 92659</b> Screw — Conn. Rod and Bracket Mounting
		<b>33 230385</b> Valve — Exhaust <b>Note:</b> <b>260444</b> Valve — Exhaust Used on <b>Model 1407</b> Series type Nos. 0128, 0141, 501024; also used on <b>Model 1417</b> Series type No. 501538.
		<b>34 230386</b> Valve — Intake <b>Note:</b> <b>230385</b> Valve — Intake Used on <b>Model 1407</b> Series type Nos. 0128, 0141, 501024; also used on <b>Model 1417</b> Series type No. 501538.
		<b>35 65906</b> Spring — Intake Valve
		<b>36 65906</b> Spring — Exhaust Valve <b>Note:</b> <b>26828</b> Spring — Exhaust Valve Used on <b>Model 1407</b> Series type Nos. 0128, 0141, 501024; also used on <b>Model 1417</b> Series type No. 501538.
		<b>40 230477</b> Retainer — Valve Spring <b>Note:</b> <b>292260</b> Rotocap —

\*Trademark of Briggs &amp; Stratton Corp.

# 140700 to 141707

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		Exhaust Valve Used on <b>Model 1407</b> Series type Nos. 0128, 0141, 501024; also used on <b>Model 1417</b> Series type No. 501538.						
43	230476	Pin – Valve Spring Ret. <b>Note:</b> 230570 Pin – Valve Spring Retainer 230569 Retainer – Ex. Valve Rotocap Used on <b>Model 1407</b> Series type Nos. 0128, 0141, 501024; also used on <b>Model 1417</b> Series type No. 501538.	71	221301	Starter Clutch Washer – Retainer (w/flange) <b>Note:</b> 220575 Washer – Retainer 66738 Washer – Ratchet Sealing Used in clutches with 7 point shank ratchet.	126	294717	Body Assembly – Upper Carburetor <b>Note:</b> 294712 Body Assy. – Upper Carburetor Used on <b>Model 1407</b> Series type Nos. 0110, 0111, 0125, 0128, 0130, 0131, 0132, 0133, 0137, 0139, 501010, 501011, 501020, 501022, 501023, 501024, 501025, 501030; also used on <b>Model 1417</b> Series type Nos. 0110, 0111, 0114, 0117, 0119, 0121, 501510, 501511, 501514, 501515, 501520, 501527, 501529, 501531, 501533, 501534, 501535, 501536, 501538, 501539, 501540, 501541.
45	260125	Tappet – Valve	72	26032	Ring – Clutch Retainer	127	220751	Plug – Welch
46	210728	Gear – Cam	73	220823	Screen – Rewind Starter	128	211182	Venturi – Carburetor
47	295063	Gear – Oil Slinger	74	93042	Screw – Rotating Screen Mounting Sem	129	23230	Bushing – Throttle Shaft
51	227355	Gasket – Intake Elbow	75	220865	Washer – Spring	130	220791	Valve – Throttle
52	227828	Gasket – Intake Elbow Mounting	76	66738	Washer – Ratchet Sealing Used with 7 point ratchet.	131	294437	Shaft and Lever – Throttle
53	93357	Screw – Carburetor to Spacer Mounting Sem	94	2292681	Valve Assembly – Carburetor Idle	132	61967	Stop – Throttle
55	295272	Housing – Rewind Starter	95	93038	Screw – Throttle and Choke Valve Mtg. Sem	133	293477	Float – Carburetor
56	295871	Pulley – Rewind Starter	98	91920	Screw – Machine, Fill. Hd. 8-32 x 5/8"	134	2293478	Valve and Seat – Fuel Inlet
57	294303	Spring – Rewind Starter	99	26157	Spring – Throttle Adjustment	135	268877	Gasket – Inlet Valve Seat
58	66564	Rope – Rewind Starter (63" long) <b>Note:</b> If longer rope is needed order No. 66574 and cut to required length.	101	93043	Pin – Throttle Stop	136	220761	Bowl – Carburetor Float
59	230228	Pin – Starter Grip	104	223114	Pin – Float Hinge	137	227682	Gasket – Float Bowl
60	66728	Grip – Starter Rope	120	92290	Washer – Lock – No. 10 x 1/16" x 3/64"	138	2221172	Gasket – Float Bowl Mounting
61	66918	Bumper – Starter Pulley	122	210596	Spacer, Intake Elbow	139	93086	Screw – Carburetor Bowl Mounting
62	93254	Screw – Pulley Bumper Mounting Sem	125	299403	Carburetor Assembly (Choke-A-Matic) <b>Note:</b> 299154 Carburetor Assy. (Manual Choke) Used on <b>Model 1407</b> Series type Nos. 0110, 0111, 0125, 0128, 0130, 0131, 0132, 0133, 0137, 0139, 501010, 501011, 501020, 501022, 501023, 501024, 501025, 501030; also used on <b>Model 1417</b> Series type Nos. 0110, 0111, 0114, 0117, 0119, 0121, 501510, 501511, 501514, 501515, 501520, 501527, 501529, 501531, 501533, 501534, 501535, 501536, 501538, 501539, 501540, 501541.	141	297024	Valve, Shaft and Lever Assembly – Choke (Choke-A-Matic) <b>Note:</b> 294874 Valve, Shaft and Lever – Choke (Manual) Used on <b>Model 1407</b> Series type Nos. 0110, 0111, 0125, 0128, 0130, 0131, 0132, 0133, 0137, 0139, 501010,
63	260414	Spring – Ratchet						
64	230543	Adapter – Ratchet Spring						
65	93163	Screw – Rewind Starter Housing Mounting Sem						
66	295684	Clutch Assembly – Rewind Starter						
67	210400	Housing – Rewind Starter Clutch						
68	63770	Ball – Clutch						
69	66718	Washer – Starter Clutch, Thrust						
70	296916	Ratchet – Rewind						

◆Included in Gasket Set –  
Part No. 295970

◆Included in Carburetor Overhaul Kit –  
Part No. 298951

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		501011, 501020, 501022, 501023, 501024, 501025, 501030; also used on <b>Model 1417</b> Series type Nos. 0110, 0111, 0114, 0117, 0119, 0121, 501510, 501511, 501514, 501515, 501520, 501527, 501529, 501531, 501533, 501534, 501535, 501536, 501538, 501539, 501540, 501541. Uses: <b>23270</b> Screw – Choke Lever <b>26229</b> Spring – Choke Lever <b>220886</b> Valve – Choke <b>220899</b> Washer			ment manufacturer: 0134, 501010, 501011, 501016, 501026, 501027, 501037; also for <b>Model 1417</b> Series type Nos. 501510, 501511, 501514, 501516, 501518, 501522, 501525, 501528, 501530, 501531.	<b>186A</b>	<b>67218</b>	Connector (For Flexible Fuel Pipe)
						<b>187</b>	<b>295836</b>	Pipe – Fuel (Metal)
						<b>Note:</b> Fuel pipes for the following <b>Model 1407</b> Series type numbers are supplied by the equipment manufacturers: 0129, 0134, 501010, 501011, 501016, 501026, 501027; also for <b>Model 1417</b> Series type Nos. 501510, 501511, 501514, 501516, 501518, 501522, 501523, 501525, 501528, 501530, 501531, 501537. <b>295995</b> Pipe – Fuel (Metal)		
						Used on <b>Model 1407</b> Series type Nos. 0128, 0130, 0131, 0142, 501020, 501021, 501024, 501028, 501033; also used on <b>Model 1417</b> Series type Nos. 0117, 0121, 501520, 501521, 501524, 501526, 501527, 501529, 501532, 501533, 501534, 501535, 501536, 501538, 501539.		
<b>142</b>	<b>298947</b>	Nozzle – Carburetor	<b>181</b>	<b>69221</b>	Cap – Fuel Tank	<b>187A</b>	<b>296004</b>	Pipe – Fuel (Flexible – 24" Long)
<b>143</b>	<b>294473</b>	Valve – Needle	<b>Note:</b> <b>293270</b> Cap – Fuel Tank Used on <b>Model 1407</b> Series type Nos. 0125, 0127, 0133, 0135, 0136, 0137, 0138, 0139, 0140, 0141, 501022, 501023, 501025, 501028, 501029; also used on <b>Model 1417</b> Series type Nos. 501515, 501517, 501540, 501541.			<b>Note:</b> <b>295050</b> Pipe – Fuel (Flexible – 12" Long) Used on <b>Model 1417</b> Series type Nos. 501525, 501528.		
<b>144</b>	<b>260256</b>	Spring – Needle Valve	<b>182</b>	<b>221088</b>	Bracket – Fuel Tank, R. H.	<b>189</b>	<b>90366</b>	Washer – Lock – 5/16 x 1/8 x 1/16"
<b>145</b>	<b>298951</b>	Carburetor Overhaul Kit	<b>Note:</b> <b>220858</b> Bracket – Fuel Tank Used on <b>Model 1407</b> Series type No. 0129.			<b>192</b>	<b>91397</b>	Nut – Hex. 5/16-18
<b>146</b>	<b>93357</b>	Screw – Carburetor Assy. Mounting Sem	<b>Note:</b> <b>221087</b> Bracket – Fuel Tank, L. H.			<b>193</b>	<b>93136</b>	Screw – Cap, Hex. Hd., 7/16-14 x 1"
<b>160</b>	<b>294872</b>	Cleaner Assy. – Air	<b>Note:</b> <b>220858</b> Bracket – Fuel Tank Used on <b>Model 1407</b> Series type No. 0129.			<b>Note:</b> <b>92272</b> Screw – Cap, Hex. Hd. – 5/16-18 x 3/4"		
<b>Note:</b> <b>296397</b> Cleaner – Air Used on <b>Model 1417</b> Series type No. 501518. Uses: <b>230636</b> Spacer <b>296441</b> Stud and Nut			<b>183</b>	<b>291367</b>	Strap Assy. – Fuel Tank	<b>90366</b> Washer – Lock – 5/16 x 1/8 x 1/16" Used to mount tank bracket to cylinder on		
<b>161</b>	<b>293991</b>	Bowl – Air Cleaner	<b>184</b>	<b>91257</b>	Screw – Machine, Fill. Hd. – 1/4-20 x 1-1/2"			
<b>162</b>	<b>294802</b>	Cover and Filter – Air Cleaner	<b>185</b>	<b>90970</b>	Nut – Square, 1/4-20			
<b>163</b>	<b>27660</b>	Gasket – Air Cleaner Mounting	<b>186</b>	<b>66111</b>	Connector – Fuel Pipe (For Metal Fuel Pipe)			
<b>169</b>	<b>90832</b>	Washer – Lock – 1/4" x 3/32" x 5/64"	<b>Note:</b> <b>63377</b> Connector – Fuel Pipe (For Metal Fuel Pipe) Used on <b>Model 1407</b> Series type Nos. 0128, 0130, 0131, 0134, 0142, 501020, 501021, 501024, 501026, 501028, 501033; also used on <b>Model 1417</b> Series type Nos. 0117, 0121, 501520, 501521, 501524, 501526, 501527, 501529, 501533, 501534, 501535, 501536, 501537, 501538, 501539.					
<b>171</b>	<b>92129</b>	Nut – Hex. – 1/4-28						
<b>172</b>	<b>27795</b>	Gasket – Air Cleaner						
<b>180</b>	<b>290816</b>	Tank Assy. – Fuel						
<b>Note:</b> For Fuel Tank welded to Blower Housing see Ref. No. <b>304</b> and order Part No. <b>295898</b> .								
<b>Note:</b> Fuel Tanks for the following <b>Model 1407</b> Series type numbers are supplied by the equip-								

‡Included in Carburetor Overhaul Kit – Part No. 298951

# 140700 to 141707

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		<b>Model 1417</b> Series type Nos. 501514, 501528, 501530, 501531.			Used on <b>Model 1407</b> Series type Nos. 0129, 0132.			
194	91808	Washer — Lock — 7/16 x 5/32 x 1/8"	241	293966	Cover Assembly — Fuel Filter	261	93105	Screw — Sem
200	295844	Blade — Governor		<b>Note:</b>	<b>296005</b> Cover Assy. — Fuel Filter	264	90355	Nut — Hex. — 10-32
203	221052	Crank — Bell			Used on <b>Model 1407</b> Series type Nos. 0129, 0132.	265	220796	Clamp — Casing
204	230117	Collar			<b>296019</b> Cover Assy. — Fuel Filter	268	65616	Casing — Control Wire — 72" long
205	92722	Screw — Bell Crank Mtg.			Used on <b>Model 1407</b> Series type Nos. 0126, 501030, 501031; also used on <b>Model 1417</b> Series type Nos. 501518, 501523, 501525.		<b>Note:</b>	If longer casing is required, specify length in inches; if shorter wire is needed, order No. 65616 and cut to required length.
210	260136	Spring — Choke Return (Choke-A-Matic)			Valve — Fuel Shut-off	269	26633	Wire — Control — 78" long
211	260137	Link — Choke Return (Choke-A-Matic)	242	295913	<b>Note:</b> <b>293934</b> Valve — Fuel Shut-off		<b>Note:</b>	If longer wire is required, specify length in inches; if shorter wire is needed, order No. 26633 and cut to required length.
212	26235	Link — Governor (Between Carburetor and Bell Crank)			Used on <b>Model 1407</b> Series type Nos. 0125, 0127, 0133, 0135, 0136, 0137, 0138, 0139, 0140, 0141, 501022, 501023, 501025, 501029; also used on <b>Model 1417</b> Series type Nos. 501515, 501517, 501540, 501541.	270	63426	Locknut — Control Wire Casing
213	260385	Link — Governor (Between Bell Crank and Governor Arm)			Used on <b>Model 1407</b> Series type Nos. 0125, 0127, 0133, 0135, 0136, 0137, 0138, 0139, 0140, 0141, 501022, 501023, 501025, 501029; also used on <b>Model 1417</b> Series type Nos. 501515, 501517, 501540, 501541.	271	290568	Lever Assy. — Control
214	260384	Spring — Governor			Used on <b>Model 1407</b> Series type Nos. 0126, 501030, 501031; also used on <b>Model 1417</b> Series type Nos. 501518, 501523, 501525.	272	290584	Base — Control Wire
240	293964	Filter Assy. — Fuel			<b>230318</b> Connector — Fuel Pipe	273	290642	Lever — Control
	<b>Note:</b>	<b>91635</b> Connector Used to connect fuel filter to tank on <b>Model 1407</b> Series type No. 501030; also used on <b>Model 1417</b> Series type No. 501518.	243	22547	Screen — Fuel Filter	274	91237	Washer — Lock — 1/4 x 3/32 x 5/64"
		<b>292797</b> Outlet (includes strainer)	244	63377	Connector — Fuel Pipe	275	92287	Screw — Machine, Rd. Hd. — 10-32 x 1/4"
		Used on <b>Model 1407</b> Series type Nos. 0125, 0127, 0133, 0135, 0136, 0137, 0138, 0139, 0140, 0141, 501022, 501023, 501025, 501029; also used on <b>Model 1417</b> Series type Nos. 501515, 501517, 501540, 501541.		<b>Note:</b>	<b>67218</b> Connector — Fuel Pipe	276	22834	Washer — Spacer
		<b>295977</b> Filter Assy. — Fuel			Used on <b>Model 1407</b> Series type Nos. 0126, 501030, 501031; also used on <b>Model 1417</b> Series type Nos. 501518, 501523, 501525.	277	22368	Washer — Control Lever
		Used on <b>Model 1407</b> Series type Nos. 0126, 501030, 501031; also used on <b>Model 1417</b> Series type Nos. 501518, 501523, 501525.			<b>230318</b> Connector — Fuel Pipe	278	22725	Washer — Control Lever
		<b>295984</b> Filter Assy. — Fuel			Used on <b>Model 1407</b> Series type Nos. 0129, 0132.	279	92306	Screw — Cap, Hex. Hd. — 1/4-28 x 5/8"
			245	668477	Gasket — Fuel Filter Bowl	282	93106	Screw — Speed Control Mounting Sem
			246	298683	Bowl — Fuel Filter	283	294817	Control Assy. — Speed
			247	99665	Yoke — Fuel Filter		<b>Note:</b>	<b>294946</b> Control Assy. — Speed
			258	93062	Screw — Sem			Uses: <b>260183</b> Spring — Control Rod
								Used on <b>Model 1407</b> Series type Nos. 0015, 0116, 0127, 0129, 0134, 0135, 0136, 0138, 0140, 0142, 501016, 501021, 501026, 501027, 501028, 501029, 501030, 501031, 501032; also used on <b>Model 1417</b> Series type Nos. 0116,

◆Included in Gasket Set —  
Part No. 295970

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
		0120, 0121, 501516, 501517, 501518, 501521, 501522, 501523, 501525, 501526, 501528, 501529, 501530, 501532, 501533, 501537. <b>298291</b> Control Assy. — Speed Used on <b>Model 1407</b> Series type Nos. 0125, 501025.			When ordering this blower housing, order No. 297415 Screw and Nut Kit also; to mount the belt guard. <b>296470</b> Housing — Blower (For Electric Starter) Used on <b>Model 1417</b> Series type Nos. 0114, 501514.	<b>310</b>	<b>93268</b>	Bolt — Case
<b>284</b>	<b>93108</b>	Screw — Clamp Mtg. Sem			When ordering this blower housing, order No. 297415 Screw and Nut Kit also; to mount the belt guard.	<b>317</b>	<b>296013</b>	Bracket — Starter
<b>300</b>	<b>294599</b>	Muffler — Exhaust <b>Note:</b> <b>296359</b> Muffler — Exhaust Used on type Nos. 501525, 501528.				<b>320</b>	<b>297162</b>	Pulley — Idler
<b>301</b>	<b>91245</b>	Nipple — Exhaust	<b>305</b>	<b>93158</b>	Screw — Blower Housing Mounting Sem	<b>321</b>	<b>210961</b>	Pulley — Starter Drive
<b>302</b>	<b>91242</b>	Locknut — Muffler and Elbow		<b>Note:</b>	<b>93294</b> Screw — Blower Housing Mounting Sem Used on <b>Model 1407</b> Series type Nos. 0140, 0141, 501023; also used on <b>Model 1417</b> Series type Nos. 501515, 501517. <b>93158</b> Screw — Sem (2) <b>62199</b> Washer — (2) Used in bottom holes of blower housing for mounting to engine on type No. 501514.	<b>322</b>	<b>90931</b>	Screw — Cap, Hex. Hd. — 1/4-20 x 2-1/4"
<b>303</b>	<b>91205</b>	Elbow — Muffler — 90° <b>Note:</b> <b>91219</b> Elbow — Muffler, 45° Street Used on <b>Model 1417</b> Series type Nos. 501525, 501528. <b>91464</b> Elbow — Muffler, 90° Street Used on <b>Model 1407</b> Series type Nos. 0127, 0135, 0140, 501029.				<b>323</b>	<b>67318</b>	Belt — Vee
<b>304</b>	<b>295389</b>	Housing — Blower <b>Note:</b> <b>295898</b> Housing — Blower (with tank) Used on <b>Model 1407</b> Series type Nos. 0125, 0127, 0133, 0135, 0136, 0137, 0138, 0139, 0140, 0141, 501022, 501023, 501025, 501029; also used on <b>Model 1417</b> Series type Nos. 501515, 501517, 501540, 501541. <b>296461</b> Housing — Blower (For Electric Starter) Used on <b>Model 1417</b> Series type Nos. 0119, 0120, 501528, 501530, 501531.	<b>306</b>	<b>221005</b>	Shield — Cylinder	<b>324</b>	<b>221067</b>	Screen — Electric Starter
			<b>307</b>	<b>93163</b>	Screw — Cylinder Shield Mounting Sem	<b>325</b>	<b>221400</b>	Pulley — Rope Starter
			<b>308</b>	<b>220824</b>	Cover — Cylinder Head <b>Note:</b> <b>221153</b> Cover — Cylinder Head Used on <b>Model 1407</b> Series type Nos. 0128, 501024; also used on <b>Model 1417</b> Series type No. 501538.	<b>326</b>	<b>92272</b>	Screw — Cap, Hex. Hd. — 5/16-18 x 3/4"
			<b>309</b>	<b>296122</b>	Motor — Electric Starter (12 volt) (Electric Auto-Lite No. Med 4001) For service on these motors see your nearest "Authorized Auto-Lite Service Station".	<b>327</b>	<b>91388</b>	Washer — Lock — 5/16 x 3/32 x 5/64
						<b>328</b>	<b>221122</b>	Guard — Belt
						<b>329</b>	<b>93246</b>	Screw — Belt Guard Mounting Sem
						<b>330</b>	<b>29878</b>	Rope — Starter
						<b>332</b>	<b>92284</b>	Nut
						<b>333</b>	<b>296834</b>	Armature Assembly
						<b>334</b>	<b>93381</b>	Screw — Armature Mounting Sem
						<b>335</b>	<b>93381</b>	Screw — Armature Mounting Sem
						<b>336</b>	<b>294735</b>	Cable — Ignition (Used before Serial No. 14677 where Cable is not molded into coil) <b>Note:</b> <b>296010</b> Cable — Ignition (Used before Serial No. 14677 where Cable is not molded into coil) Used on <b>Model 1407</b> Series type Nos. 501024; also used on <b>Model 1417</b> Series type No. 501538.
						<b>337</b>	<b>29693</b>	Plug — Spark
						<b>338</b>	<b>29806</b>	Gasket — Spark Plug
						<b>339</b>	<b>29667</b>	Breaker Assembly — Ignition
						<b>340</b>	<b>26018</b>	Spring — Breaker Arm
						<b>342</b>	<b>65704</b>	Plunger — Breaker Point
						<b>343</b>	<b>29861</b>	Condenser
						<b>344</b>	<b>93370</b>	Screw — Condenser Mounting Sem
						<b>345</b>	<b>221046</b>	Cover — Breaker Point
						<b>346</b>	<b>93014</b>	Screw — Breaker Point Cover Mounting Sem
						<b>347</b>	<b>221808</b>	Switch — Stop
						<b>348</b>	<b>66898</b>	Block — Stop Switch
						<b>349</b>	<b>220902</b>	Blade — Switch

# 140700 to 141707

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
354	90576	Nut — Hex. — 8-32	382	92666	Screw — Cap, Hex. Hd. — 1/4-20 x 1/2"	506	90072	Screw — Machine, Rd. Hd. — 8-32 x 5/8"
355	66554	Collar — Insulating	383	89838	Wrench — Spark Plug	507	66895	Insulator
356	295413	Wire — Ground	406	260386	Spring — Breather Tube	508	93294	Screw — Blower Housing Mounting Sem (Used at bottom holes)
	<b>Note:</b>	295941 Wire — Ground Used on <b>Model 1407</b> Series type Nos. 0015, 0116, 0125, 0127, 0129, 0134, 0135, 0136, 0138, 501016, 501021, 501023, 501025, 501026, 501027, 501028, 501029, 501030, 501031, 501032; also used on <b>Model 1417</b> Series type Nos. 0116, 0120, 0121, 501516, 501517, 501518, 501521, 501522, 501523, 501525, 501526, 501528, 501529, 501530, 501532, 501533, 501537.	413	230581	Nut — Starter Mounting	512	296560	Armature and Wiring Assembly
			474	296436	Armature — Flywheel Generator	513	296567	Clutch Assembly — Electric Starter
			475	296562	Rectifier	514	91700	Nut — Hex. — 1/4-20
			477	67538	Sleeving — Wire	517	295423	Pulley — Rope Starter (with screen)
			478	296367	Plate — Generator Mtg.	518	69932	Rope — Starter
			480	93163	Screw — Support Plate and Bracket Mtg. Sem	521	298529	Shielding — Ignition Cable
			481	230582	Spacer — Armature Mtg.	534	93324	Screw — Air Cleaner
			482	93234	Screw — Armature Mounting Sem		<b>Note:</b>	296441 Stud and Nut 230636 Spacer Used on type No. 501518.
			483	296266	Capacitor (Condenser)	535	27987	Element — Air Cleaner
			484	93166	Screw — Self Tapping, Hex. Hd., Sem	536	297036	Cleaner Assy. — Air
			485	296437	Post Assembly — Fuse	537	27994	Gasket — Air Cleaner
			486	67135	Fuse — AG — 1-1/2 Amperes	590	93226	Screw — Breaker Mounting Sem
358	295970	Gasket Set	487	296347	Cap — Fuse Holder	597	93258	Screw — Plate Mounting
359	93149	Screw — Machine, Rd. Hd. — 5-40 x 3/8"	488	296579	Block Assembly — Fuse	601	93053	Clamp — Fuel Pipe
360	93150	Nut — Square — 5-40	489	93237	Screw — Fuse Block Mounting Sem	608	295001	Starter Assy. — Rewind
361	91432	Screw — Stop Switch Mtg.	490	67125	Fuse — 3 AG — 7-1/2 Amperes	655	221014	Anchor — Spring
362	291630	Shield — Spark Plug (with stop switch)	491	221241	Support — Charger Mtg.	656	260672	Spring — Idler Arm
363	19165	Puller — Flywheel	503	221205	Strap — Starter (long)	665	296768	Oil Minder
370	66432	Washer — Plain	504	221206	Strap — Starter (short)			
380	62199	Washer — Plain	505	92278	Nut — Hex. — 1/4-20			
381	91419	Screw — Cap, Hex. Hd. — 1/4-20 x 5/8"						





